

DIGITAL POCKET THERMOMETER

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

FEATURES

- Backlit LCD digital display
- °C/ °F temperature scales
- Foldout stainless steel probe
- Compact pocket size

CONTROLS

- ON/OFF button
- Manual release probe
- °C/ °F selection button
- (next to the battery compartment)
- HOLD Button
- START/STOP button
- Hours count up button
- Minutes count up button

OPERATING INSTRUCTIONS

BATTERY INSTALLATION

1. Remove the battery cover on the back of the thermometer.
2. Insert 1 AAA 1.5V battery (not included) as indicated by the polarity symbols (+/-). See Fig.C.
3. Replace the battery cover.

°C/ °F TEMPERATURE DISPLAY

Locate °C/°F switch next to the battery position.

Slide switch to select Fahrenheit or Celsius temperature scale. See Fig.C.

POWERING ON/OFF

Locate the power button on the right side of the thermometer.

Slide switch to the "ON" position to turn on the thermometer.

When not in use, slide to the "OFF" position.

THERMOMETER

1. Remove the battery cover and insert the battery on the back side of thermometer and select °C/°F next to the battery compartment for desired temperature scale. Replace the battery cover.
2. Slide switch to "ON" on the right side of thermometer.
3. Manual extend the probe completely.
4. Remove the meat or poultry from the oven and insert the probe tip into the thickest part of the meat or poultry but not in contact with bone or gristle. See Fig. B.
5. When the temperature is stable, press "HOLD" to lock the temperature on screen ("HOLD" appears on screen). Remove the thermometer to check whether the desired temperature is reached. If not, return the meat or poultry to the oven and press the "HOLD" button again to release the locked-in temperature and display current temperature ("HOLD" disappears from screen). Repeat the above steps until the desired temperature is reached.
6. Timer count-up or count-down: To start a count-up time, without setting a time, press ►/■ to start from zero. The timer will count up to 99 hours, 59 minutes. To set a count-down time, press +H to set the hours and press +M to set the minutes of the displayed time. Press and hold +H or +M to increase the time setting quickly. To begin the count-down time, press ►/■ when you start cooking. When count-down is finished, the thermometer will beep and the LCD will ash. Press ►/■ to silence the alert. To pause the timer during a count-down or count-up, press +M and +H to reset to zero.
7. Slide switch to "OFF" to conserve battery life when you are finished cooking.

WARNING

1. Do not leave in an oven or grill during cooking. Do not put in the dishwasher. Not for microwave use.
2. Handle with care. Thermometer probe may become hot during use.
3. Remove battery if the thermometer will not be used of a long period of time.
4. Chemical burn hazard. Keep battery away from children. The battery should be disposed of properly. Even used battery may cause injury.
5. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the battery, and keep it away from children.

CARE AND MAINTENANCE

Hand wash the meat probe ONLY using mild soap and hot water. Rinse thoroughly. Dry completely with a soft cloth.

DISPOSAL



Environmental Protection

Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres.



Do not put your used batteries, nickel-metal hydride, rechargeable, round cell or starter batteries in with your household rubbish. Take them to an appropriate disposal/collection site.

WARRANTY

A statutory warranty applies for this product.

Damages caused by wrong treatment or operation, by false placement or storage, improper connection or installation, as well as force or other external influences are not covered by this warranty. We recommend careful reading of the operating instructions as it contains important information.

Note:

1. In case this product does not function correctly, please firstly check if there are other reasons, e.g. for electrical appliances interruption of the power supply, or generally incorrect handling are the cause.
2. Please note that, where possible, the following documents or rather information should be provided together with your faulty product:
 - Purchase receipt
 - Model description/Type/Brand
 - Describe the fault and problem as detailed as possible

In the case of a claim for guarantee or defects, please contact the seller.

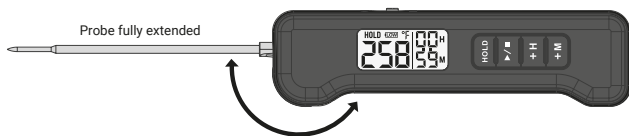 
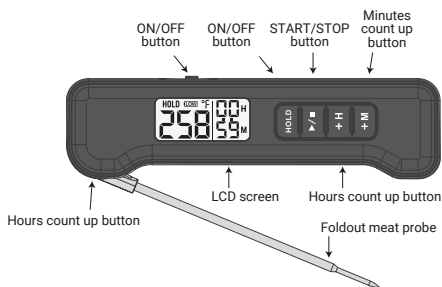 


Fig. C Battery compartment

 
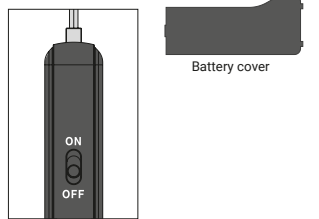 


Fig. B

